


# LaSanavita

110SS 110SR 凯旋门 I

TRIUMPHAL ARCH I

## 全自动咖啡机

Automatic Coffee Machine

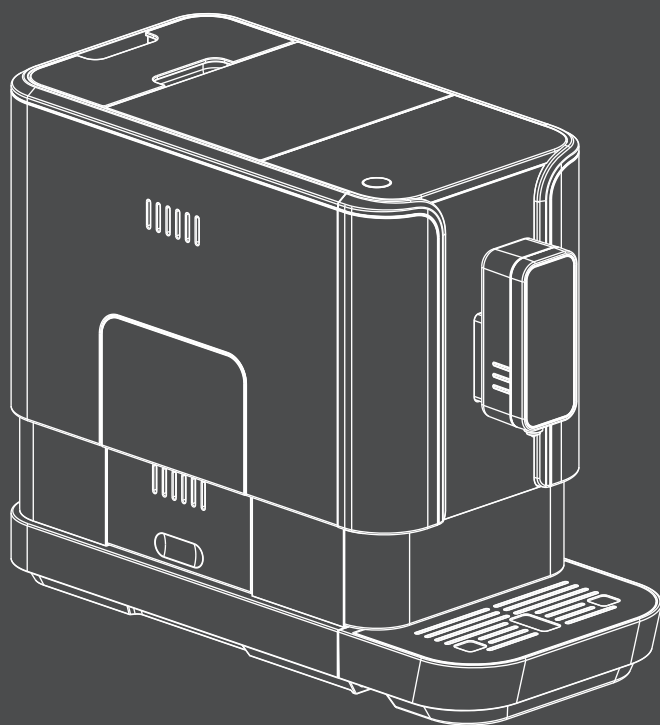

## 用户使用说明书 Instruction Manual

# 目录

<b>使用说明</b>	<b>1</b>
<b>A. 了解你的全自动咖啡机</b>	<b>5</b>
I. 咖啡机各部分及配件说明	5
II. 配件	5
III. 控制面板	7
<b>B. 产品安装</b>	<b>9</b>
<b>C. 日常操作</b>	<b>11</b>
I. 水箱注水	11
II. 倒入咖啡豆到豆仓	13
III. 制作咖啡	13
IV. 制作美式咖啡	15
V. 喜爱设定	15
VI. 制作热水	15
VII. 日常清洁产品	17
VIII. 关机	19
IX. 自动断电	19
<b>D. 附加设定</b>	<b>19</b>
I. 调整您的咖啡/热水份量	19
II. 研磨调整	21
III. 模式选择	21
<b>E. 清洁和保养</b>	<b>23</b>
I. 除垢	23
II. 清空功能	23
III. 手动清洗	25
IV. 清洁本机	25
V. 清洗内部咖啡粉出口位置	27
<b>F. 故障排除</b>	<b>29</b>

# Directory

<b>SAFETY PRECAUTIONS</b> .....	<b>2</b>
<b>A. MACHINE OVERVIEW</b> .....	<b>6</b>
I. GENERAL DESCRIPTION .....	6
II. ACCESSORY .....	6
III. CONTROL PANEL & ON/OFF BUTTON .....	8
<b>B. MACHINE INSTALLATION</b> .....	<b>10</b>
<b>C. DAILY OPERATION</b> .....	<b>12</b>
I. FILLING THE WATER TANK .....	12
II. FILLING THE BEAN CONTAINER .....	14
III. MAKING YOUR COFFEE .....	14
IV. PREPARING AMERICANO COFFEE .....	16
V. FAVOURITE FUNCTION .....	16
VI. HOT WATER .....	18
VII. DAILY CLEANING OF THE APPLIANCE .....	18
VIII. TURNING OFF THE MACHINE .....	20
IX. AUTO-SHUT OFF .....	20
<b>D. FURTHER SETTING</b> .....	<b>20</b>
I. ADJUSTING COFFEE/HOT WATER VOLUME .....	20
II. GRINDING ADJUSTMENT .....	22
III. MODE SELECTION .....	22
<b>E. CLEANING &amp; MAINTENANCE</b> .....	<b>24</b>
I. DESCALING .....	24
II. EMPTY SYSTEM FUNCTION .....	26
III. MANUAL RINSING .....	26
IV. CLEANING THE APPLIANCE .....	26
V. CLEANING COFFEE POWDER OUTLET .....	28
<b>F. TROUBLESHOOTING</b> .....	<b>30</b>

## 安全使用说明

这些重要的安全预防措施是产品的关键部分。请在第一次使用本产品前仔细阅读使用说明书。

您可以保留说明书以备将来参考或将其留给其他用户使用。

本产品为家庭使用而设，且只能按照本使用说明书指示操作。

始终小心处理并警告提醒其他用户潜在的危险。

设备声压低于70分贝。

▲ 危险：误用本机会造成伤害。

### 需做的：

1. 使用本产品前，请检查电源及电压是否适合在当地使用。
2. 使用本产品前请解开及拉直电源线。
3. 将产品放在牢固稳定的平面上。
4. 本产品必须放置在平稳的台面上使用。
5. 在下列情况下请断开电源：
  - 在水箱注水前
  - 需在产品上拆卸任何零件或改装任何配件前
  - 清洁或维修前
  - 当本产品运作不正常时
  - 使用本产品后
6. 长期不使用本产品时，请清空水箱。
7. 清洁本产品前，请先待本产品冷却后再移除或安装配件。
8. 请使用冷水冲调咖啡。温水或其他液体可能会损坏咖啡机。
9. 如电源线损坏，必须由制造商或其服务代理商或合格人员更换，以避免任何危险。
10. 研磨器只适合咖啡豆使用。
11. 儿童不得玩此产品。
12. 儿童不得使用此产品。请将产品及其电线放在儿童不能接触的地方。
13. 当无人看管时，安装、拆卸或清洗本机前，必须中断电源。
14. 身体、感官或精神能力较差或缺乏经验和知识的人可以使用该设备，他们必须在正常人员的监督下安全使用并告知可能涉及的危险。
15. 本产品仅用于家庭使用。
16. 为避免因无意中重置热短路器而造成危险，不得通过外部开关设备（例如定时器）为该设备供电，或将其连接到公共设施电气回路中。
17. 如果8岁及以上的儿童以及身体、感官或精神上有缺陷或缺乏经验和知识的人在接受有关以安全方式使用该设备的监督并已经了解危险的情况下，才可以使用此咖啡机。儿童不得使用该设备。儿童不得在没有监督的情况下进行清洁和维护。
18. 本产品必须在+10℃至+40℃的环境温度下使用。

## **SAFETY PRECAUTIONS**

These important safety precautions are critical part of the appliance. Please read them all carefully before using the appliance for the first time. You may keep the instructions for future reference or pass it to other users.

The appliance is designed for domestic use and may only be operated in accordance with these instructions for use.

Always handle with care and warn other users the potential danger.

The Appliance sound pressure is below 70 dB.

**▲ DANGER: Misuse of the appliance can cause injury!**

### **DO' s**

1. Check the mains voltage stated on the rating plate corresponds to the local electricity supply.
2. Unwind and straighten the power cord before using the appliance.
3. Place the appliance on a firm and steady surface.
4. The appliance must be used and rested on a stable surface.
5. Disconnect the appliance from mains supply outlet under the following conditions:
  - Before the water tank is filled with water
  - Before removing any parts from the appliance or refit any parts on the appliance.
  - Before cleaning or maintenance
  - When the appliance is not working correctly
  - After using the appliance
6. Empty the water tank, when the appliance unused for long period.
7. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
8. Always use cold water to make coffee. Warm water or other liquids could cause damage to the coffee maker.
9. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid any hazard.
10. Use the grinder for grinding coffee bean only.
11. Children shall not be playing with the appliance.
12. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
13. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
14. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction by a person concerning use of the appliance in a safe way and understand the hazards involved.

**避免的：**

1. 使用时，请勿让儿童接触本产品或其电源线。
2. 除非得到授权许可，不要使用延长电源线组件。
3. 接上电源后，请勿将本产品置于无人看管的状态。
4. 请勿在户外环境下使用本产品。
5. 请勿将产品用于其他用途上。
6. 请勿将电源线放在桌子或柜台边缘或高温的表面。
7. 请勿将本产品放置在湿滑或高温的表面上使用。
8. 如果回水盒放置不正确，请不要启动本产品。
9. 请勿将本产品浸入水或任何液体中。
10. 如本产品有任何部份损坏，请勿使用。
11. 当本产品运作不正常时，请勿使用。
12. 拨下电源插头时，请不要拉扯电源线。
13. 请勿让电源线放在物件尖锐的边缘。
14. 请勿试图打开本产品主体或拆卸任何零件，内部无可维修部件。
15. 建议使用后清洁本产品，但请勿将本产品浸入水中清洗。
16. 请勿使用非本产品的配件，可能会有危险。
17. 请勿将此产品放置在煤气炉、电炉或焗炉及其他热源附近使用。
18. 不要连续使用热水功能多于一缸水箱的水。
19. 使用时请勿放在柜子中。


15. This appliance is designed for household use only.
16. In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
18. The appliance must be used at ambient temperatures of +10°C to +40°C.

#### **DO NOT' s**

1. Do not allow children to touch the appliance or the power cord during the operation.
2. Do not use an extension power cord set unless competent authority has approved it.
3. Do not leave the appliance unattended, when it is connected to main supply.
4. Do not use the appliance in outdoor environment.
5. Do not use appliance for other than intended use.
6. Do not let cord hang over the edge of table or counter or touch hot surface.
7. Do not use or place the appliance on a wet or hot surface.
8. Do not use the appliance if the drip tray is improperly placed in position.
9. Do not immerse the appliance in water or any liquids.
10. Do not use the appliance when any parts of the appliance are damaged.
11. Do not use the appliance when it is not working properly.
12. Do not unplug the appliance by pulling the power cord.
13. Do not place the cord on a sharp edge of an item.
14. Do not attempt to open the main body or dismantle any parts from the appliance, there is no serviceable part inside.
15. The appliances normally cleaned after use and not intended to be immersed in water for cleaning and the appliance must not be immersed.
16. The use of accessories not included in the box is not recommended. It might be dangerous and should be avoided.
17. Do not place the appliance on or near hot gas or electric burner, or in heated oven.
18. Do not operate the hot water function continuously for more than one tank of water.
19. Do not be placed in a cabinet when in use.

## A. 了解您的全自动咖啡机

### I. 咖啡机各部份及配件说明

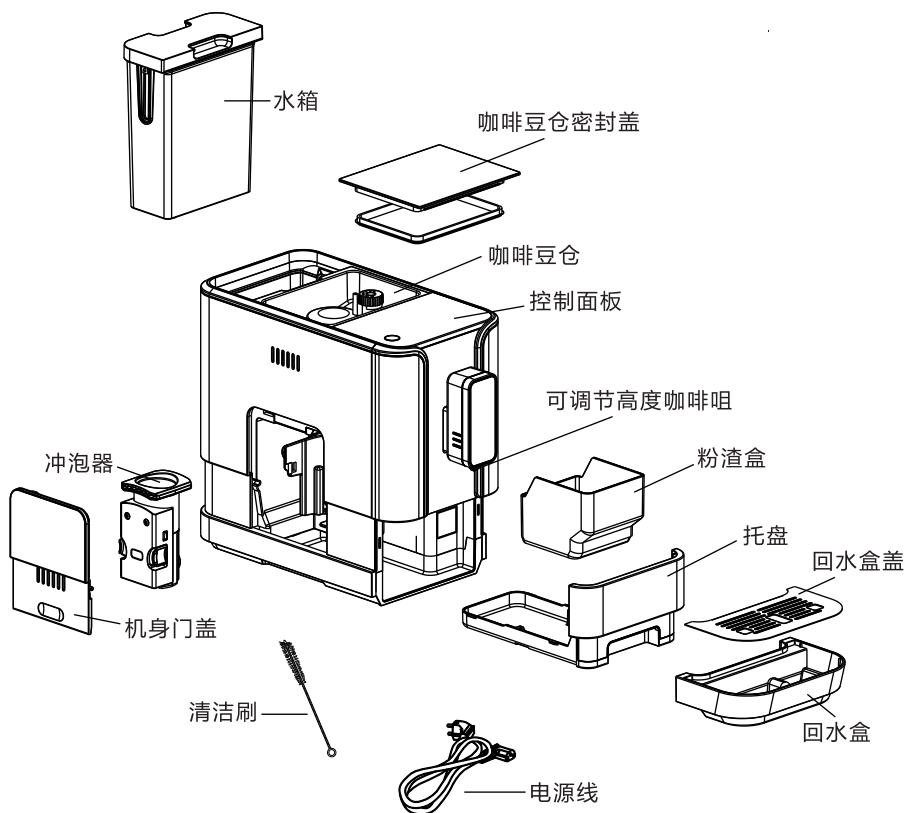


### II. 配件

包装盒内附设3包除垢剂，供自动清洗时使用。



# A. MACHINE OVERVIEW


## I. GENERAL DESCRIPTION

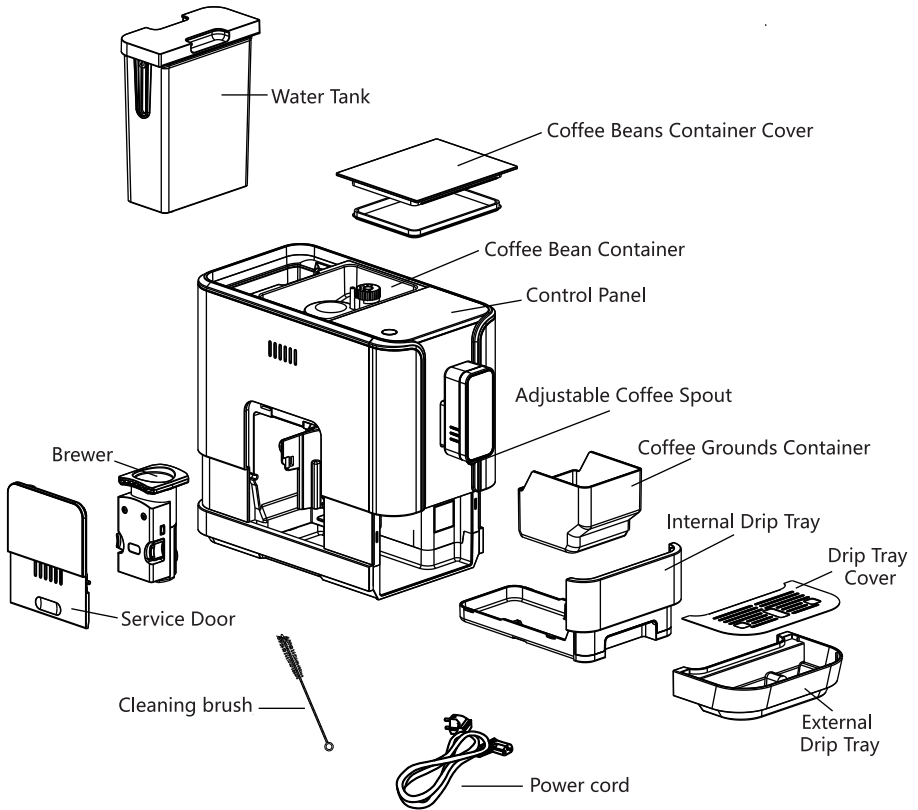


## II. ACCESSORY

In the box, three packs of cleaning agents are included for the process of Descaling.


### III. 控制面板

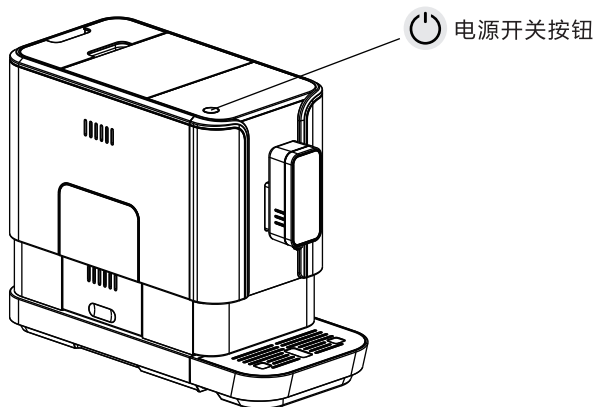

电源开关按钮

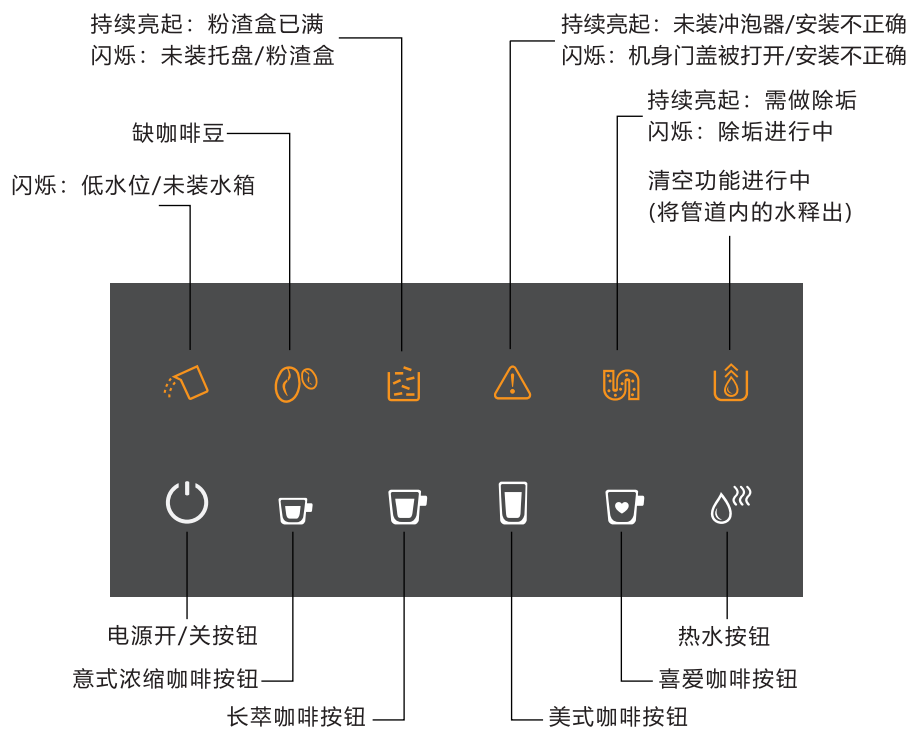

### III. CONTROL PANEL & ON/OFF BUTTON

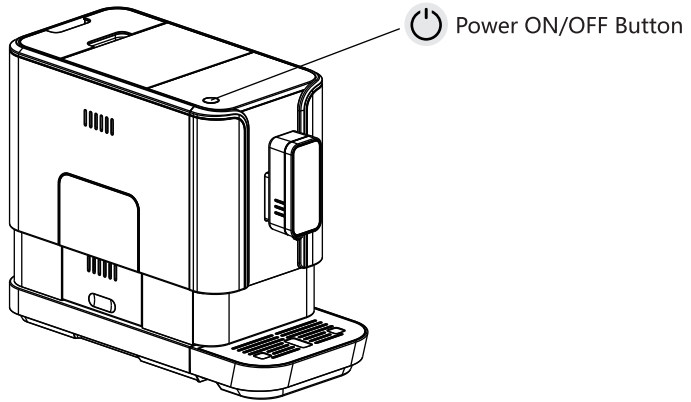

Lights up stably:  
coffee grounds container is full  
Flashing:  
Internal Drip Tray/coffee grounds  
container is missing


Lack of bean

Flashing: Low water level/  
Water tank missing

Lights up stably: Brewer is missing/  
installed improperly  
Flashing: Service door is opened /  
installed improperly

Lights up stably:  
Requires to do descaling  
Flashing:  
Descaling is under process

Empty System Function  
is running

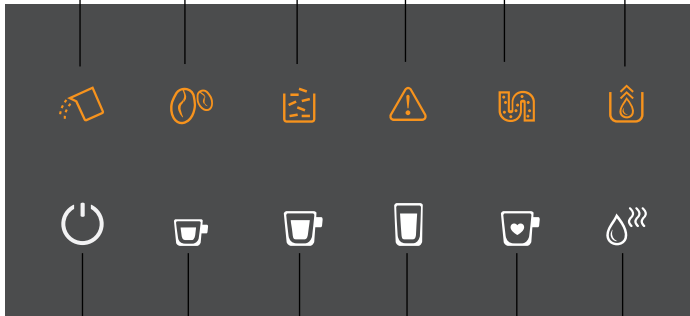

Power ON/OFF Button

Espresso Button






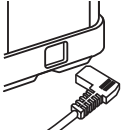
Lungo Button

Americano Button

Hot Water Button






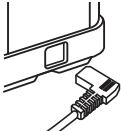
Favorite Coffee Button

## B. 产品安装
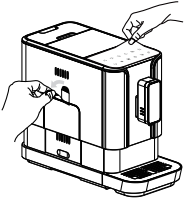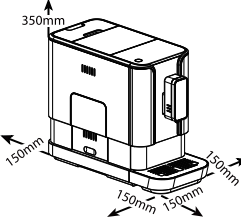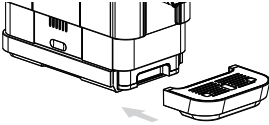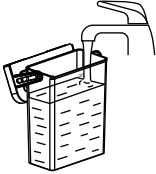
<p>1. 请移除产品上所有的保护膜, 贴纸和其他包装材料。</p>	
<p>2. 产品的体积大小, 将此机放于一个容易接驳到的电源, 安全及稳定的台面。(需要的最小距离如右图)</p>	
<p>3. 将回水盒插入, 并确保已正确安装。</p>	
<p>4. 将水箱注满水 (详细操作请参阅“水箱注水”说明)。</p>	
<p>5. 将咖啡都倒入咖啡豆仓中 (详细操作请参阅“倒入咖啡豆到豆仓”说明)。</p>	
<p>6. 解开并伸直电源线, 将其插头插入位于本产品背面的插槽中, 将电源线的另一端插入适当电压的插座中。</p>	

▲ 注意: 首次使用前, 按住电源开/关按钮和热水按钮 (请参阅“手动冲洗”) 清洁咖啡机内部。


## B. MACHINE INSTALLATION
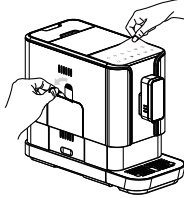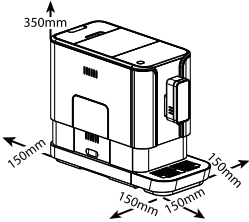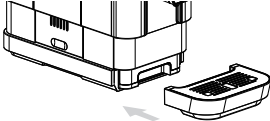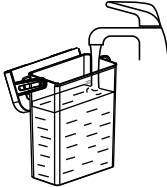
<p>1. Remove any protective films, stickers and any other packing material on the appliance.</p>	
<p>2. Choose a safe and stable surface with an easily reachable power supply and allow minimum distance from the sides of the machine.</p>	
<p>3. Insert the external drip tray. Make sure it is inserted correctly.</p>	
<p>4. Fill the water tank with water (see "FILLING THE WATER TANK").</p>	
<p>5. Fill the bean box with coffee beans (see "FILLING THE COFFEE BEAN CONTAINER").</p>	
<p>6. Unwind and straighten the power cord and insert the plug into the socket located on the back of the machine. Insert the other end of the power cord into a wall socket with suitable power voltage.</p>	


▲ **NOTE:** Press Hot Water button (see "Manual Rinsing" ) to clean inside of the coffee machine before the first use.

## C. 日常操作


### I. 水箱注水

当  闪烁时，水箱正处于低水位，请注满水箱。

1. 将水箱的盖子作为手柄提起。
2. 用清水冲洗水箱。将水箱加至最大液位，然后放回本产品中。请确保安装正确。

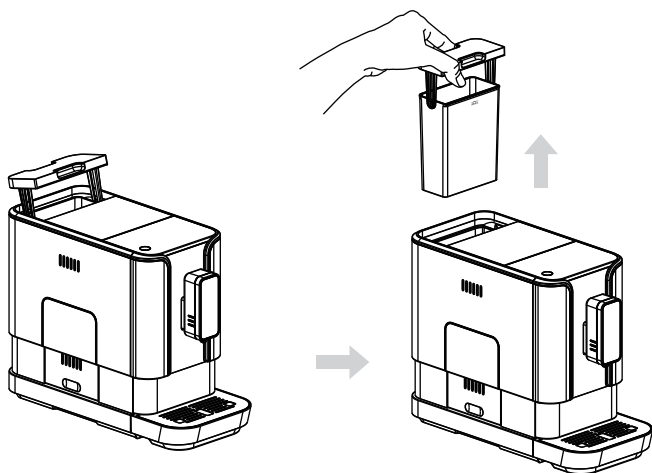


▲ 注意：为防止水从水箱溢出，请勿直接注水到本产品水箱。

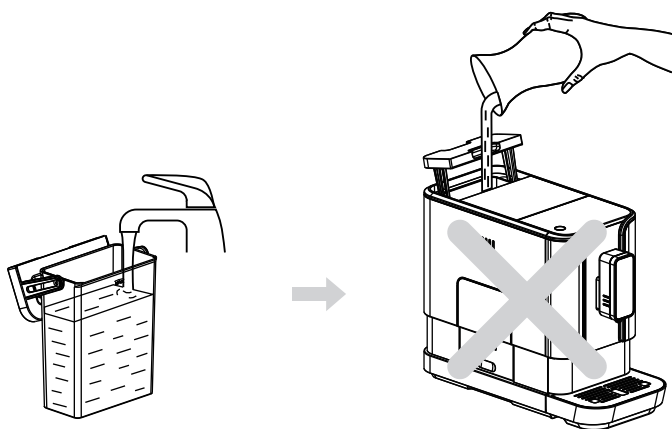


▲ 重要提示：切勿加入温水、热水、气泡水或其他液体在水箱内，否则会损坏水箱和机器。


## C. DAILY OPERATION

### I. FILLING THE WATER TANK

1. When  is flashing, the water tank is in low water level and requires filling the water tank.
2. Rinse the water tank with fresh water. Fill the tank to the Max level and place it back into the machine. Make sure it is fully inserted.

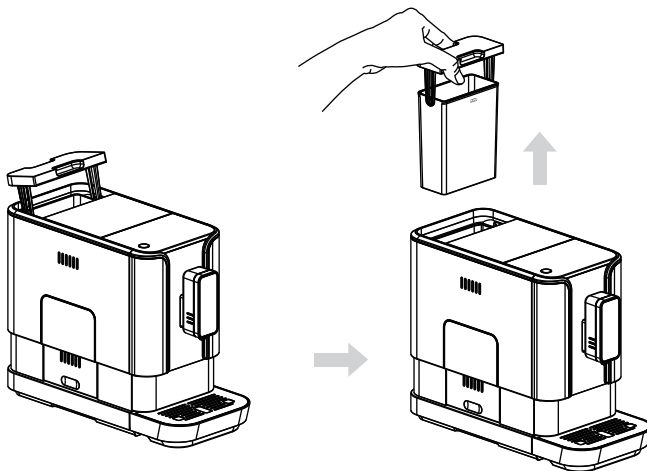


▲ **Note:** To prevent overflowing the water tank, do not add water directly into the appliance.

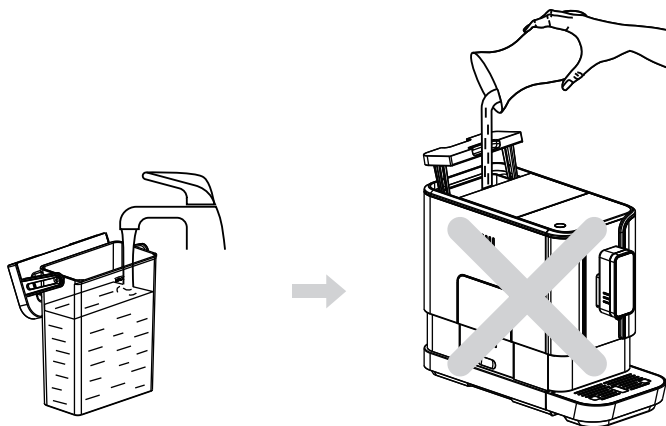


▲ **IMPORTANT:** Never fill the water tank with warm, hot, sparkling water or any other liquids which might damage the water tank and the machine.

## II. 倒入咖啡豆到豆仓


当  闪烁时，请加入咖啡豆：


1. 打开咖啡豆密封盖。
2. 慢慢倒入咖啡豆。
3. 装回咖啡豆仓盖子。

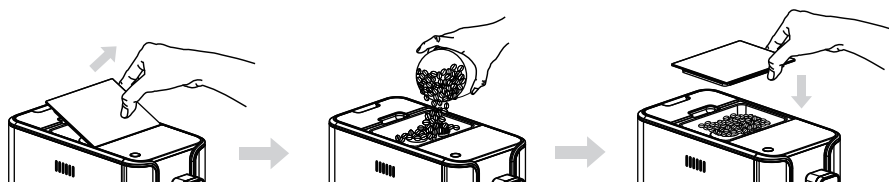

▲ 重要提示：只可加入咖啡豆在豆仓。咖啡粉，速溶咖啡，焦糖咖啡及其他都可能会损坏机器。


## III. 制作咖啡

1. 按下电源开/关按钮  启动本产品。请确保回水盒安装好及水箱内有水，本产品会进行自动清洗，可以按下热水按钮停止自动清洗。本产品随即进入待机状态。
2. 将杯子放在咖啡咀下，按杯子大小调节咖啡咀高度，并可除去回水盒作调整如下：

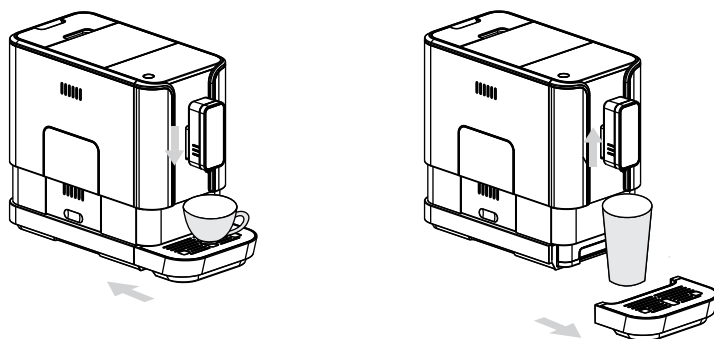




## II. FILLING THE BEAN CONTAINER


When  is flashing, the appliance needs to be filled with coffee beans:


1. Remove the bean container lid.
2. Fill the bean box with coffee beans.
3. Install the container lid.

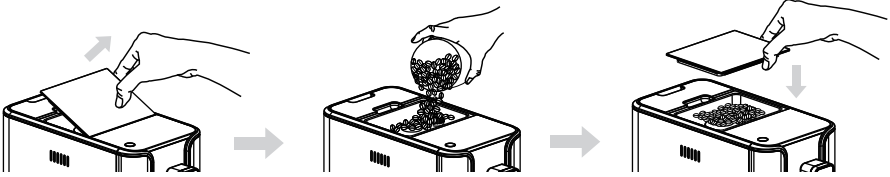



**▲ IMPORTANT:** Fill the bean container with coffee beans only. Grounded, instant, caramelized coffee or other objects may damage the machine.

## III. MAKING YOUR COFFEE

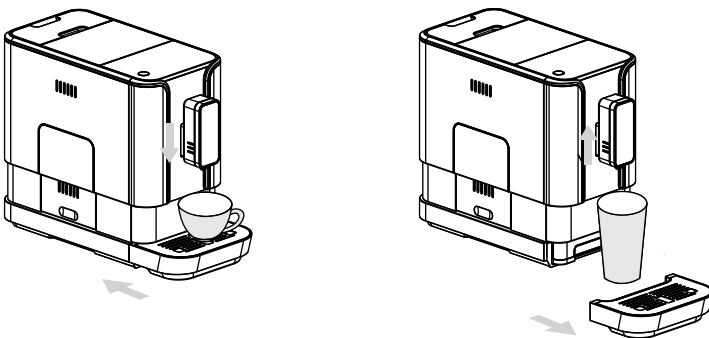1. Switch on the appliance by pressing the Power on/off button . Make sure the drip tray under the coffee spout and water tank with water inside. The appliance will perform auto-rinsing for a small cup of water, you can stop it by pressing Hot Water Button. The appliance is then in the standby condition.
2. Place a cup under the coffee spout and adjust the height of the spout to fit the cup. Depending on the cup size (too tall or too wide), the drip tray can be removed or adjusted the position as below:




3. 按照个人咖啡喜好，按下意式浓缩咖啡按钮  或长萃咖啡按钮 .
4. 按下咖啡按钮时，该按钮灯光亮起表示咖啡正在准备中。如果您想在操作过程中停止输出咖啡，请再次按下该按钮。
5. 当产品回到操作界面，表示咖啡已冲泡完毕。

▲ **提示：**意式浓缩按钮具有更高的咖啡浓度。两个咖啡按钮的液量均可调节(请参考“调节咖啡/热水的液量”)。

▲ **注意：**第一次使用前，请按热水按钮清洗咖啡机内部。


## IV. 制作美式咖啡

1. 在咖啡咀下放一个杯子。
2. 按美式咖啡按钮 ，按钮灯光亮起表示美式咖啡正在准备中。本产品将先出咖啡，然后出热水。
3. 当产品回到操作界面，表示咖啡已冲泡完毕。

## V. 喜爱设定

您可以使用喜爱功能来记录想要的意式浓缩咖啡，长萃咖啡和美式咖啡的份量。

### 设定喜爱咖啡功能：



1. 在咖啡咀下放一个杯子。
2. 长按喜爱功能按钮  2秒，意式浓缩咖啡、长萃咖啡和美式咖啡按钮会闪烁。按下您想要的咖啡。
3. 当咖啡输出中，长按所选按钮至所需份量，然后松开按钮停止。本产品会发出两声提示声，表示咖啡口味及份量已被记忆。

### 使用喜爱咖啡功能：

1. 在咖啡咀下放一个杯子。
2. 按下喜爱功能按钮 ，已记录的咖啡口味和份量会进行输出。

## VI. 制作热水


1. 在咖啡咀下放一个杯子。

3. Depending on the taste of coffee you would like to have, pressing Espresso button  or Lungo button .
4. The coffee button being pressed will light on and the illuminations will light up indicating that the appliance is preparing the cup of coffee. You can stop dispensing coffee by pressing the button again.
5. When the appliance is back to standby condition, the coffee is ready to serve.

▲ Espresso and Lungo button volumes can be adjusted (see "ADJUSTING COFFEE/HOT WATER VOLUME").

▲ Note: Press the hot water button to clean inside of the coffee maker before first use.


## IV. PREPARING AMERICANO COFFEE

1. Put a cup under the spout.
2. Pressing the Americano button . Both Americano button and illumination will light up indicating the appliance is preparing the cup of Americano. The coffee will be dispensed first and then hot water.
3. When the appliance is back to standby condition, the coffee is ready to serve.


## V. FAVOURITE FUNCTION SETTING


You can use the favourite function to memorize your desired volume of strong coffee, mild coffee and Americano.

### To set up the Favorite button:

1. Put a cup under the spout.
2. Press and hold the Favorite button  for 2 seconds. The Espresso, Lungo and Americano buttons will flash. Press your choice of favorite coffee.
3. The corresponding drink will be dispensed. Press and hold again to keep dispensing and release the button to stop it. Two beeps will sound and volume will be memorized at this stage.

### To set up the Favorite button:

1. Put a cup under the spout.
2. Press the Favorite button . The memorized favorite drink will be dispensed.

2. 按热水按钮 ，本产品即会输出热水，如果您想在操作过程中停止输出，请再次按下该按钮。
3. 当产品回到操作界面，热水已准备好。


## VII. 日常清洁产品

适时的清洁和保养可以延长本产品的使用寿命。

### 清洁回水盒和粉渣盒

请每天清空并清洁回水盒。

1. 取出回水盒，清空回水盒内的水，用清水冲洗，然后沥干。
2. 拉开托盘和粉渣盒，清空粉渣盒并用清水冲洗，然后沥干。
3. 将粉渣盒放在托盘上，然后插回原来的位置。
4. 将回水盒放回原位。

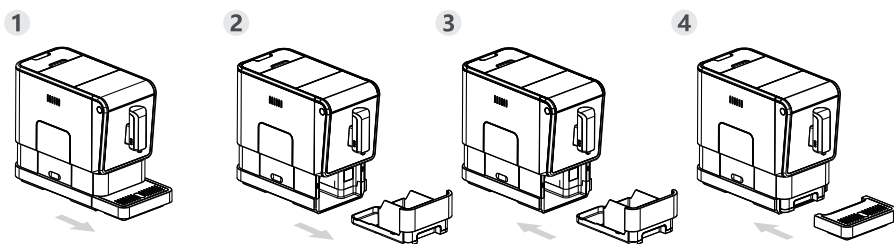


注意：当  亮起时，粉渣盒需清空。

当  闪烁中，表示粉渣盒未装到位。

### 清洁冲泡器

1. 按下机身门盖。
2. 按下取出机身门盖。
3. 按下冲泡器两边的按钮并取出，用清水冲洗冲泡器，然后沥干。
4. 将冲泡器插入原位，并将机身门盖盖上。

## VI. HOT WATER

1. Put a cup under the spout.
2. Press Hot Water button . Both hot water button and indicator light up indicating the appliance is heating up water.
3. When the appliance is back to standby condition, the hot water is ready to serve.


## VII. DAILY CLEANING OF THE APPLIANCE


 
Timely cleaning and maintenance of the appliance is very important in prolonging the life of the appliance.

### Cleaning Drip Tray and Coffee Grounds Container

Empty and clean the drip tray every day.

1. Pull the external drip tray out of the machine. Empty the water left in drip tray and rinse with fresh water. Dry it afterwards.
2. Slides open internal drip tray and coffee ground container. Empty the coffee ground container and rinse with fresh water. Dry it afterwards.
3. Put back the coffee grounds container in internal drip tray.
4. Secure the external drip tray at its original position.

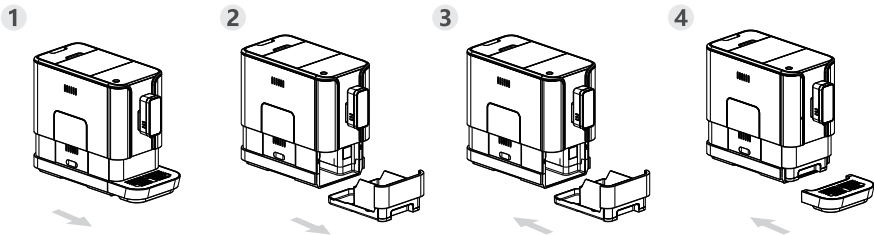


▲ Note: When  lights up, the coffee ground container needs to be emptied.  
When  is flashing, the coffee ground container is missing.


### Cleaning Brewer

1. Slightly press the bottom of service door to open it.
2. Take out the service door from machine.
3. Press the release knob on brewer and take out. Rinse it under tap.


1

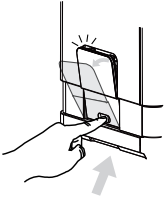


2

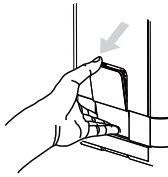


3

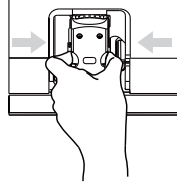

4

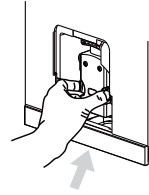

注意：当  亮起时，表示冲泡器漏装/未装好。

当  闪烁中，表示机身门盖未盖上或未装到位。

## 清洁水箱

1. 取出水箱，并用清水冲洗。
2. 将可饮用的水加至最大液位，将其放回咖啡机。

## VIII. 关机

按下电源开/ 关按钮关闭咖啡机。

## IX. 自动断电

本产品配有自动断电功能。根据您选择的模式，设有不同的自动关机时间（请参阅“模式选择”）


## D· 附加设定



### I. 调整您的咖啡/热水份量

本产品可记忆您所默认的意式浓缩咖啡、长萃咖啡、美式咖啡及热水的份量。

1. 当输出咖啡（意式浓缩咖啡、长萃咖啡、美式咖啡）或热水时，长按所选按钮至所需份量，本产品会持续输出咖啡或热水。
2. 当咖啡量达到你想要的量时，松开按钮。本产品会发出两声提示声，表示份量已被记录。

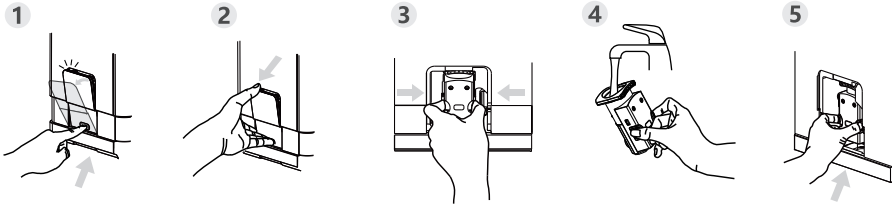4. Insert the brewer back to its original position. Put the service door on the machine.



▲ **Note:** When  lights up stably, it indicates that the brewer is missing / installed improperly.  
When  is flashing, it indicates that the service door is missing / installed improperly.

### Cleaning Brewer

1. Lift the water tank out of the machine and rinse with fresh water.
2. Fill it with drinkable water up to the Max level. Put it back in the machine.

## VIII. TURNING OFF THE MACHINE

Switch off the appliance by pressing the Power on/off button.

## IX. AUTO-SHUT OFF

The Appliance is equipped with auto shut-off. Depending on the mode you have selected the appliance will have different auto-shut off timing (see "MODE SELECTION" ).

## D. FURTHER SETTING


### I. ADJUSTING COFFEE/HOT WATER VOLUME

The machine can memorize your desired volume of strong coffee, mild coffee, Americano and hot water.

1. When making your coffee (strong coffee, mild coffee or Americano) or dispensing hot water, press and hold the button you selected. The appliance will continue to make the cup of coffee or hot water.
2. When the volume of coffee or hot water meets your desired volume, release the button. Two beep sounds indicates the volume of drink is being memorized.

## II. 研磨调整

您可以根据自己的口味，调整在豆仓内研磨器的旋钮，旋钮上的圆点显示研磨的粗细度。当研磨器在研磨咖啡豆时，请转动旋钮作调节。

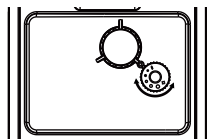



▲ 注意：当研磨器不在操作时，请勿转动旋钮，会损坏研磨器。

## III. 模式选择

 本产品有三种不同的设置，包括：原厂模式、省电模式和加速模式。省电模式可帮助你节省更多的能源，加速模式比原厂模式更能加快咖啡的制作时间。

	加速模式	原厂模式	省电模式
照明灯	有	有	没有
冲泡前预浸泡功能	没有	有	有
自动关机时间	30分钟	20分钟	10分钟
容量记忆	有	有	有

▲ 注意：冲泡前预浸泡功能是以少量的水滋润在冲泡器内已磨好的咖啡粉。此功能可令冲泡器内的咖啡粉膨胀，加大冲泡时的压力，帮助充分萃取咖啡油和咖啡粉内的味道。


1. 当本产品处于待机状态时，长按  并维持5秒。
2. 按钮  闪烁，按钮在不同模式下将有以下指示：

	热水按钮 	意式浓缩咖啡按钮 	长萃咖啡按钮 
省电模式	灯亮着	闪烁中	闪烁中
加速模式	闪烁中	灯亮着	闪烁中
原厂模式	闪烁中	闪烁中	灯亮着



## II. GRINDING ADJUSTMENT

 You can adjust the grinder to choose different coffee roast levels by turning adjuster knob in the bean container. The dots on adjuster knob indicate the fineness of grind. When the grinder is grinding the coffee bean, you can turn the adjuster knob to change the fineness.





**▲ WARNING:** Never do the grinding adjustment when the grinder is not operating. It may damage the grinder.




## III. MODE SELECTION

The machine has three different settings: default setting, ECO mode and speed mode. In ECO mode, the appliance helps to save more energy. In speed mode, the user can make their coffee faster than in default setting.

	Speed Mode	Default Setting	ECO Mode
<b>Illumination Light</b>	Yes	Yes	No
<b>Pre-brewing</b>	No	Yes	Yes
<b>Auto shut off time</b>	30mins	20mins	10mins
<b>Cup Volume memory</b>	Yes	Yes	Yes

**▲ Note:** The pre-brewing function moistens the grounded beans in the brewer with a small amount of water before full extraction. This expands the coffee grounds to build up a greater pressure in the brewer which help extraction of all the oils and full flavor from the grounded beans.

1. When the machine is in standby condition, press and holds the  for 5 seconds.
2. The  will be flashing. Buttons will show following indications under different settings:

	Hot water button 	Espresso button 	Lungo button 
<b>In ECO Mode</b>	<b>Light ON</b>	Flashing	Flashing
<b>In Speed Mode</b>	Flashing	<b>Light ON</b>	Flashing
<b>In Default Setting</b>	Flashing	Flashing	<b>Light ON</b>


3. 按热水按钮启动省电模式、特浓咖啡按钮启动加速模式、长萃咖啡按钮启动原厂设定的原厂模式，两下提示声音响起表示该模式已被启动。

▲ 注意：如果按下已启动的模式，提示声音将不会响起。

4. 若需要维持设置不变，请按  或等待5秒返回待机状态。

## E. 清洁和保养

### I. 除垢

当  长亮时，表示本产品需要进行除垢。为确保本产品维持在最佳状态，取决于水的硬度，建议最少每月进行一次除垢。





1. 注满清水到水箱的最大液位位置，

2. 加入一包除垢剂到水箱内。


▲ 重要提示：不要用醋或其它清洁剂来进行清洗，以免损坏本产品。

3. 插入电源。




4. 放置一个足够大的器皿在咖啡咀下。

5. 在待机状态下，同时按住  和意式浓缩咖啡按钮  5秒。当听到两下提示声， 和意式浓缩咖啡按钮  会闪烁。

6. 按意式浓缩咖啡按钮  以确认进行除垢过程。若要恢复到待机状态，请按 。

7.  闪烁表示本产品正进行除垢程序。

▲ 注意：请保持皮肤 / 身体远离热水。

8. 当水箱中的所有水都被冲出时， 和意式浓缩咖啡按钮  将会闪烁。倒出水箱中剩余的所有溶液，再注满清水至最大液位位置，把水箱放回咖啡机， 会熄灭，本产品将继续进行除垢程序。

9. 当除垢程序完成后，本产品将自动关机。


▲ 重要提示：为确保除垢程序顺利完成，请耐心等待，并确保本产品自动关机。

### II. 清空功能

长时间不使用、进行防霜或进行维修前，建议先进行清空功能。


1. 在待机状态下，同时按住  和长萃咖啡按钮  5秒。

2.  将闪烁。

3. 从机身移除水箱。 亮起表示正在进行清空过程。在移除水箱前，若要恢复到待


3. Press the hot water button for ECO mode, Espresso button for speed mode and Lungo button for default setting. Two Beep sounds indicates that the mode is being selected.

▲ **Note:** If you are pressing the relative Light ON button in each mode, the machine will not response.

4. If you would like to remain the setting unchanged, press  again or wait for 5 seconds for the machine to return to the standby condition.

## E. CLEANING & MAINTENANCE

### I. DESCALING

When  is lights up stably, it indicates that the appliance needs to undergo descaling. The appliance will remain in the best condition if this function is performed at least once a month or more regularly depending on the hardness of water used. It is also suggested that to





1. Fill the water tank to MAX level.



2. Add one pack of cleaning agent into the water tank.

▲ **IMPORTANT:** Do not use vinegar or other cleaning agents to do descaling of this appliance. The cleaning agent might damage the appliance.

3. Plug in the appliance.




4. Place a sufficient large container under the coffee spout.

5. In standby condition, press and hold Power ON/OFF  and Espresso button  for 5 seconds. A beep sound will be heard with  and Espresso button  will be flashing.

6. Press Espresso button  to confirm to undergo descaling process. To resume back to the standby condition, press .

7.  will be flashing indicating that the appliance is undergoing descaling process.

▲ **WARNING:** Keep skin/body away from the hot water.

8. When all water in the water tank is being dispensed out,  and Espresso button  will be flashing. Remove the remaining solution in water tank and fill the tank with tap water to MAX level. When water tank is filled up,  will go off. The appliance will continue the descaling process.

9. When descaling process is completed, the appliance will switch off automatically.

▲ **NOTE:** To ensure the descaling process can be completed, please be patient during the process and make sure the applicant switch off automatically



机状态，请按 。

4. 当清空功能完成后，本产品将自动关机。

▲ **重要提示：**进行过清空功能后，再次使用本产品时，请按热水按钮至咖啡咀流出热水。

### III. 手动冲洗

使用本产品后，可执行手动冲洗以清洗咖啡嘴。如本产品长时间没有被使用，建议执行手动循环冲洗。

1. 在待机状态下，同时按住  及热水按钮  5秒。

2. 热水按钮  闪烁，咖啡咀会输出少量用于冲洗的热水。

▲ **危险：**从咖啡喷咀流出的热水会被收集在回水盒中，请避免接触飞溅的热水。

3. 冲洗后，本产品将返回待机状态。

### IV. 清洁本机

1. 拔下电源插座的电源线。






2. 倒出所有在托盘和回水盒的水。

3. 使用柔软或不刮手的湿抹布清理本产品上的水渍。

▲ **重要提示：**不要使用不包括在产品包装盒内附的任何腐蚀性、醋或除垢剂清洁本产品。

## II. EMPTY SYSTEM FUNCTION

 
 
The empty system function is recommended before storing, for frost protection or before taking to repair agent.

1. In standby condition, press and hold the  and Lungo button  together for 5 seconds.
2.  will then be flashing.
3. Remove the water tank from the appliance.  will light up stably indicating that the empty system is under process. The coffee spout will dispense a small amount of water. You can press  before removing the water tank to resume back to the standby condition.
4. When the empty system function is completed, the appliance will switch off automatically.

**▲ IMPORTANT:** After performing Empty System Function, press the Hot Water button until water dispense from spout when the machine is used again.

## III. MANUAL RINSING

You can perform a manual rinsing cycle to clean the coffee nozzle after use, or after the appliance has not been used for a long period of time.

1. In standby condition, press and hold the  and hot water button  for 5 seconds.
2. Hot water button will be flashing. The coffee nozzle will then dispense a small amount of water which is used for the rinsing.

**▲ WARNING:** Hot water will be dispensed from coffee spout into external drip tray. Avoid contact with splashes of water.

3. After rinsing, the appliance will return to the standby condition.






## IV. CLEANING THE APPLIACNE

 1. Disconnect the power cord from the mains supply outlet.
2. Pour away all water in both the internal and external drip trays.
3. Use a dampened cloth or non-scratching cleaner to clean the water stains on the appliance.

**▲ IMPORTANT:** Never use any abrasive, vinegar or descaling agents not included in the box to clean the appliance.


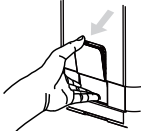


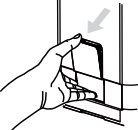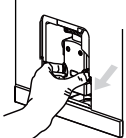
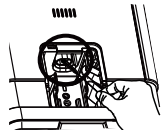

## V. 清洗内部咖啡粉出口位置

长时间使用本产品后，咖啡粉可能会黏附在内部咖啡粉出口位置。建议按以下步骤进行清理以确保咖啡粉能成功输送到冲泡器。

1. 按下机身门盖。	
2. 取出机身门盖。	
3. 按下冲泡器两边的按钮。	
4. 取出冲泡器。	
5. 清水冲洗冲泡器，然后沥干。	
6. 使用本产品的清洁刷子清理内部咖啡出口位置。	
7. 用清洁布彻底清洁机器内部。在关闭活动门之前确保内里完全干燥。	

## V. CLEANING COFFEE POWDER OUTLET

Coffee powder may stick on the wall of powder outlet for appliance after used a long period of time. It is suggested to clean the outlet by following steps to ensure that coffee powder can deliver to the brewer.

1. Push the recess area of service door.	
2. Take out the service door.	
3. Press the release knob of brewer.	
4. Take the brewer out.	
5. Rinse the brewer under running water. Let it dry completely before reassembling on the machine.	
6. Use cleaning brush to clean the powder outlet and remove any coffee grounds or powder residues from the machine.	
7. Use a cloth to clean inside of the machine thoroughly. Dry completely before closing the side door.	

## F. 故障排除



问题	原因	解决方法
本产品无法正常工作。	本产品没有连接到电源。	- 插上电源，然后按下开/关按钮。 - 检查电线和插头。
在面板上多次按下功能键都没有或延迟反应。	- 本产品受到电磁干扰。 - 有污垢在面板上。	- 拔下本产品电源，待几分钟后重新启动。 - 用所提供的布清洁面板。
咖啡不够热。	- 杯子未被预热。 - 冲泡器太冷。	- 预热杯子。 - 冲泡咖啡前至少进行 3 次冲洗程序。
咖啡不能从咖啡嘴流出。	之前可能进行过清空功能。	按热水按钮直至水从咖啡咀流出。
第一杯咖啡的质量差。	研磨器第一次未能输送足够咖啡粉到冲泡器内。	重新冲调咖啡，随后冲泡出来的咖啡将会是优质的。
咖啡没有咖啡油脂。	咖啡豆不新鲜。	改用其他适合品牌的咖啡豆。
轻触式按钮不灵敏。	没有从本产品正面按下轻触式按钮。	从本产品的正面方向，按下图标底部的轻触式按钮。
本产品需要很长的时间来预热。	水垢过多。	使用除垢功能。
当水箱移除或水箱低水位时，控制面板  没有提示。	水箱连接位附近的位置被弄湿。	把水箱连接位附近的位置抹干。
托盘注满水。	咖啡粉太细，阻塞水流出。	操作时，将研磨度调至较粗的程度
咖啡输出缓慢及出现滴漏情况。	咖啡粉太细，阻塞水流出。	操作时，将研磨度调至较粗的程度
豆仓有足够的咖啡豆，但缺豆指示  闪烁。	内部咖啡粉出口被阻塞。	执行“清洗内部咖啡粉出口位置”的步骤。
除垢过程进行时，除垢指示灯持续闪烁  。	除垢过程未完成。	按照“除垢”的步骤操作，并确保设备自动关闭。

制造商：上海长喜赞贸易有限公司

地址：上海市奉贤区南桥镇八字桥路1919号2幢12层



## F. TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not work.	The appliance is not connected to the mains.	- Plug in and press the switch. - Check the cable and the Plug.
No or delayed response in several trials of pressing on function key on the panel.	- Appliance is under an electromagnetic interference. - Dirt over the panel.	- Unplug the appliance. Restart after few minutes - Clean the panel with the cloth provided.
The coffee is not hot enough.	- The cups have not been preheated. - The brewing unit is too cold.	- Warm the cups - Rinse the appliance at least 3 times before making the coffee.
The coffee cannot come out from spout.	Empty system function maybe used before.	Press the hot water button until water can come out from spout.
The first cup of coffee is poor quality.	The first run of grinder does not pour sufficient quantity coffee power into the brewing unit.	Throw the coffee away. The other coffees will always be of good quality.
Coffee has no cream.	Coffee bean is not fresh.	Change or using appropriate brand of coffee bean.
The touch buttons are not sensitive.	Not pressing the touch button from the front direction of the appliance.	Press the lower bottom part of the icon of the touch button from the front direction of the appliance.
The appliance takes too long time to warm up.	Excessive scale has built up.	Descale the appliance.
The water tank is removed / the water level is very low in the water tank but  have no alert.	The area near the water tank connector is wet.	Wipe the water around the water tank connector
Internal drip tray is filled with a lot of water.	Coffee powder too fine which block the water to come out.	Adjust the coffee fineness to bigger dot during grinder operation.
Coffee is delivered too slowly or a drop at a time.	Coffee powder too fine which block the water to come out.	Adjust the coffee fineness to bigger dot during grinder operation.
Lack of bean indicator flashes but there is still a lot of coffee bean inside the container.	Internal coffee powder outlet is blocked.	To follow the steps of in "Cleaning coffee powder outlet".
Descaling indicato  keep flashing even perform descaling process.	The process not completed.	To follow the steps of "Descaling" and make sure the appliance switch off automatically.

Shanghai Changxizan e-Shopping Limited

12/F, Block 2, No. 1919, Baziqiao Road, Nanqiaozen, Fengxian District, Shanghai





**LaSanavita**